


# INSTALLATION INSTRUCTIONS


## RF 20 ROOM SENSOR

1. Open housing of the room sensor by pressing the snap-on locks and remove housing cover.

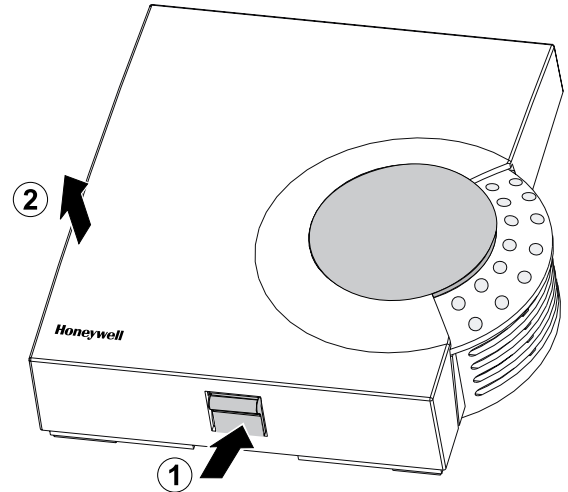


**Figure 1: Removing housing cover**

2. Screw room sensor to the flush distribution box.

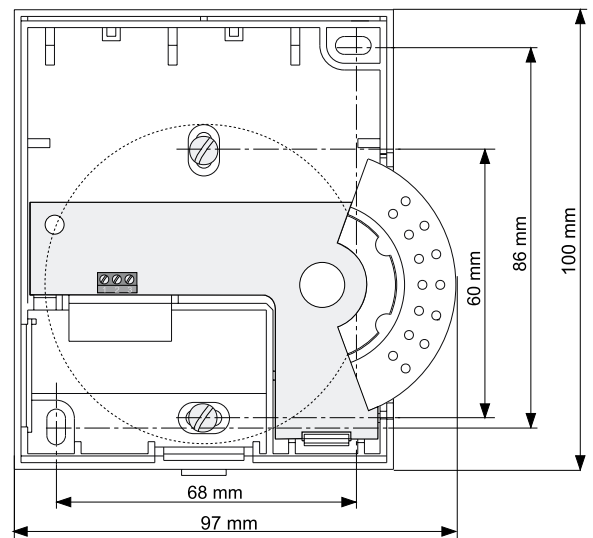

**Figure 2: Installation onto flush distribution box**

3. Connect cable coming from controller.

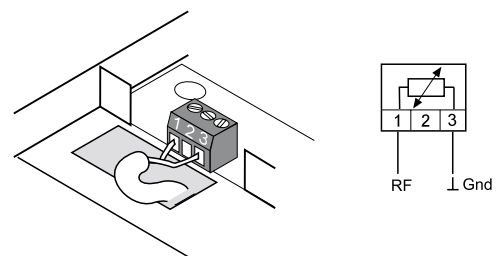

**Figure 3: Terminals**

Connection to terminals:

- 1 = Room temperature sensor (1 is left)
- 2 = not used
- 3 = GND

4. Return cover to housing by placing top edge against back plate and snap lower part of cover onto housing.

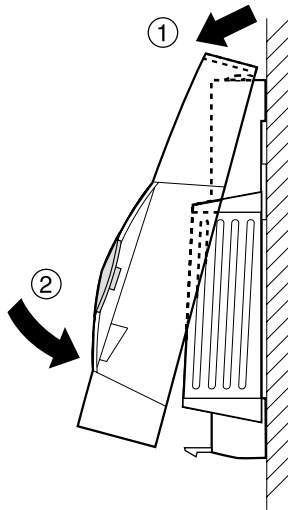


Figure 4: Replacing of housing cover



**Institut  
Automatització, S.L.**  
c\ Gomis, 29-33, 08023 BARCELONA

Tel.: 93 454 20 06  
Fax: 93 323 70 59

iac@instauto.com  
www.instauto.com

www.  
**TODO-  
CONTROL**.com  
SOLUCIONES PARA AUTOMATIZACIÓN Y CLIMATIZACIÓN