



 



RDH10RF/SET consists of a RDH10RF wireless temperature controller and a RCR10/433 receiver. The RDH10RF allows you to set the desired room temperature (setpoint) at the time you want. The unit features an ergonomic setting knob for ease of temperature control.

### Display

	Actual room temperature in °C
	The unit is controlling to the selected comfort temperature
	Indicates when there is demand for heat
	Replace batteries
	Appears on the screen when the transmitter is being tested.

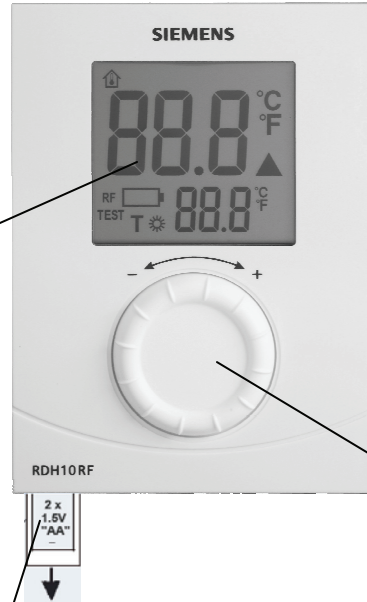


### Setting knob


Warmer/colder knob for selecting the temperature setpoint



### Battery compartment

Two alkaline batteries type AA, 1.5 V

### Commissioning before start-up

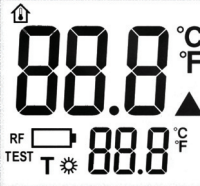	<h4>Commissioning</h4> <ul style="list-style-type: none"> <li>Remove the black transit tabs from the alkaline batteries.</li> <li>Check to see if the battery holder is in the correct position.</li> <li>If no batteries are inserted, fit 2 alkaline batteries type AA in the battery compartment.</li> </ul>
---	---

	<h4>Initial power-up</h4> <p>Once batteries are fitted, all symbols will appear on the display as shown for about two seconds.</p>
---	--

	<h4>Selecting the required temperature</h4> <ul style="list-style-type: none"> <li>Turn the setting knob counter clockwise to decrease the setpoint, or clockwise to increase the setpoint in increments of 0.5 °C</li> <li>The required temperature is displayed next to the comfort temperature symbol </li> </ul>
---	---

### Changing the batteries

- Get two new batteries of type AA alkaline, 1.5 volts.
- Remove the battery holder, then the batteries, insert new batteries and replace the battery holder.  
**The old, set values must be checked!**
- Make certain the old batteries are disposed of properly, in compliance with environmental requirements.


### Energy saving tips without sacrificing comfort

- Never allow room temperatures to exceed 21 °C.
- Air out rooms: Air out rooms for short periods with open windows and doors.

## Front View Receiver

### LED Signal Indicator

The signal is good when the LED flashes green.  
A flashing red LED indicates that there is no signal.

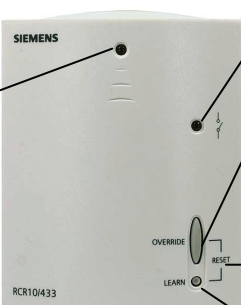

### LED Relay Indicator

Orange LED indicates relay is on.

### OVERRIDE Button


Press this button to overwrite transmitter values.

RESET: Press the LEARN & OVERRIDE button for 4 seconds to delete all transmitter addresses.

### LEARN Button

Press the button to learn a transmitter address.

## Rear View Room Unit (Transmitter)

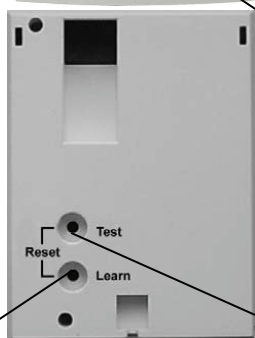

### Learn Button

Release learn telegram

### TEST Button

Used for testing transmission.

## Front View Receiver

### Configuration instructions for the Siemens RDH10RF/SET

The Transmitter RDH10RF and the receiver RCR10/433 are set to communicate (bonded) with each other at the factory. If they fail it is necessary to re bond the units due to loss of communication please follow the following instructions.

1. Reset receiver by simultaneously pressing the LEARN & OVERRIDE button for 4 seconds.
2. Press and release the LEARN button. This set the receiver to learn mode.
3. Press and release the LEARN button on the back of the transmitter.
4. A green flashing or solid LED indicates a good signal, a red flashing or solid LED indicates no signal.
5. To test transmission, press the TEST button on the transmitter, switches the relay on in the receiver regardless of temperature. The RF TEST symbol appears on the thermostat display.
6. An orange LED indicates that the relay is on.

### NOTE:

You can press the OVERRIDE button on the receiver to manually switch ON/OFF for a faulty room unit or transmission protocol.

### NOTE:

You must re-execute the workflow for commissioning the set to reestablish a connection between the room controller and receiver .



Institut  
**Automatització, S.L.**

c\ Gomis, 29-33, 08023 BARCELONA

Tel.: 93 454 20 06  
Fax: 93 323 70 59

iac@instauto.com  
www.instauto.com

www.  
**TODO-CONTROL.com**  
SOLUCIONES PARA AUTOMATIZACIÓN Y CLIMATIZACIÓN