


INSTALLATION AND SAFETY INSTRUCTIONS
INSTRUCTIONS POUR L'INSTALLATION ET LA SÉCURITÉ
EINBAU-UND SICHERHEITSHINWEISE
MONTERING- OCH SÄKERHETSINSTRUKTIONER


autoform
URBAN LOADER

Х2



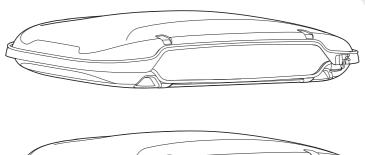


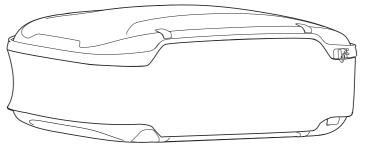


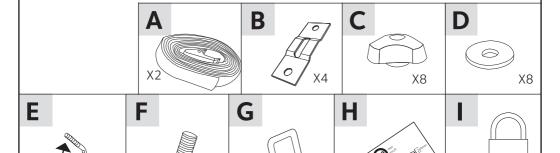

X4


Х4

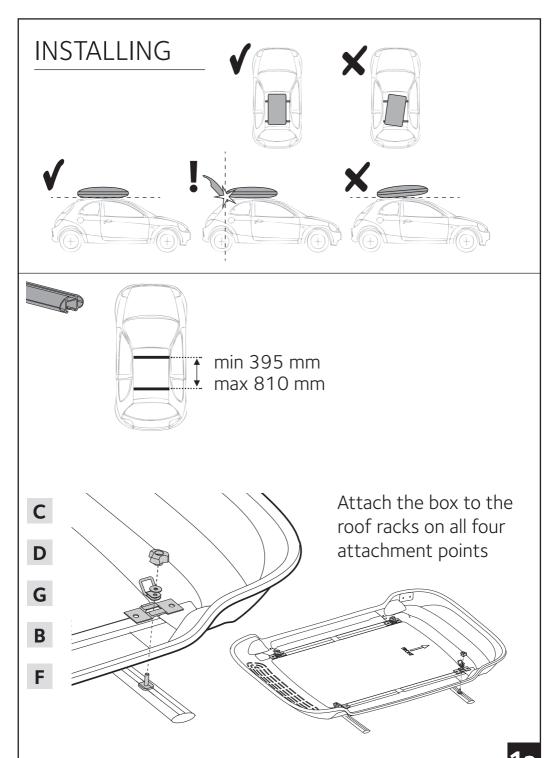

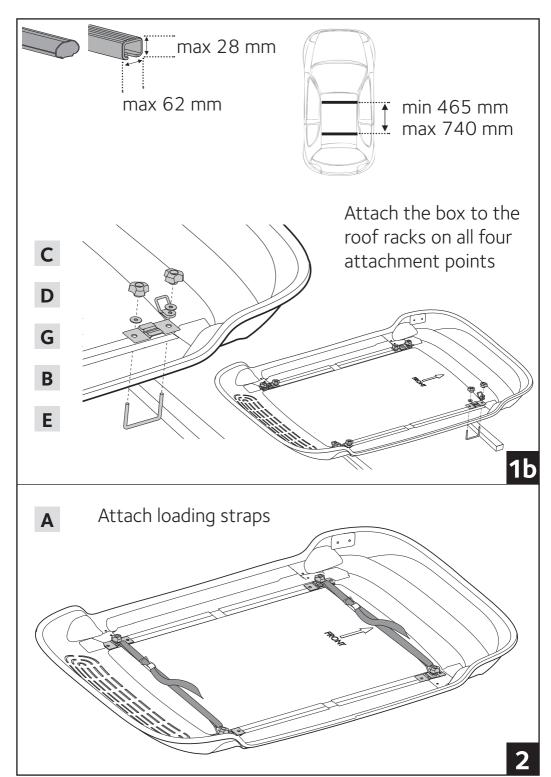


#### **OPENING**

- 1) Open outer zipper completely
- 2) Release the hitch and push the top upwards.

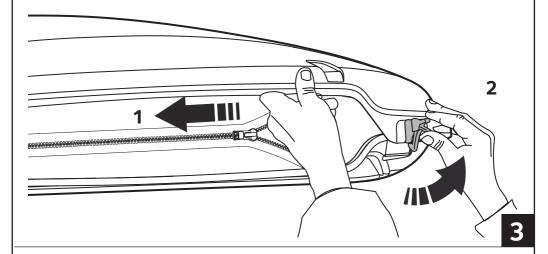


- 1) Push until top clicks into place. Repeat on other side.
- 2) Open the inner zipper.

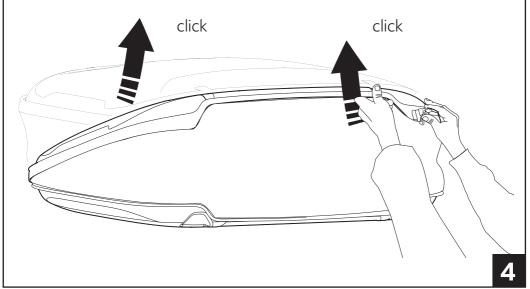

Place the load evenly troughout the box.

All items are to be fastened with the loading

straps.

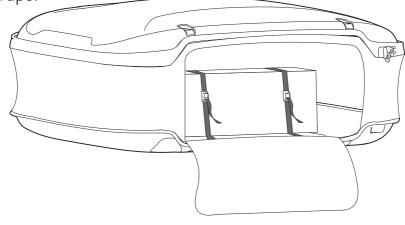


# Warning!

Load must not contain any sharp objects.

Do not close top when loaded.

Max load: 50kg

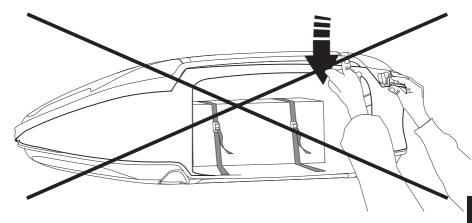


5


## **CLOSING**



- 1) Close inner zipper and secure with padlocks.
- 2) Push to close.

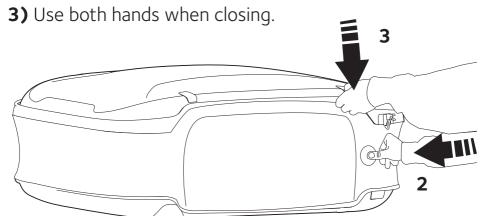


Box is properly closed when top covers bottom and both hitches are clicked into place and outer zipper is closed.

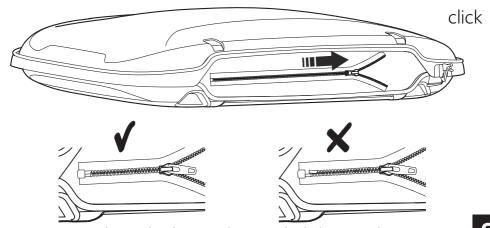

Make sure that the two ends are completely drawn together.

8

Check drivers manual for maximum permitted roof load of your car.

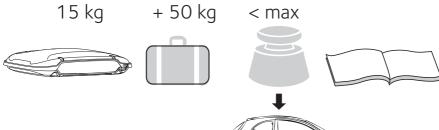

The roof box is water resistant, not completely water proof.




## Warning!







Place the attached sticker on the dashboard.

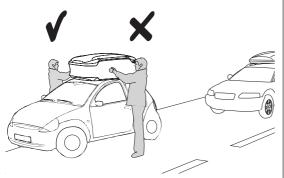


Please consider difference in car behavior (crosswinds, cornering and braking)







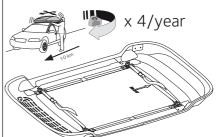

UL-05

#### autoform

Autoform AB Box 155 782 24, Malung SWEDEN

Phone: +46(0)280-59 33 00 E-mail: info@autoform.se

For energy saving and safety reasons, remove roof box and roof racks when not in use.