

Progress Europe
distributed by Volkswagen Zubehör GmbH

G	Fitting Instructions:	SIDE BAR
D	Montageanleitung:	SCHWELLERROHR
O	Montagevoorschrift:	SIDE BAR
F	Instructions de montage:	MARCHE-PIEDS
E	Instrucciones de montaje:	JUEGO PROT. DE PARA. TRASERA
I	Schema di montaggio:	PEDANE LATERALI
S	Manual:	SIDOFOTSTEG

VW Crafter 2006



Type Nr.: 2E0 071 690 C 4P7
2E0 071 694 C 4P7
Best.-Nr.: 2E0 071 693 C 4P7




30 Min.









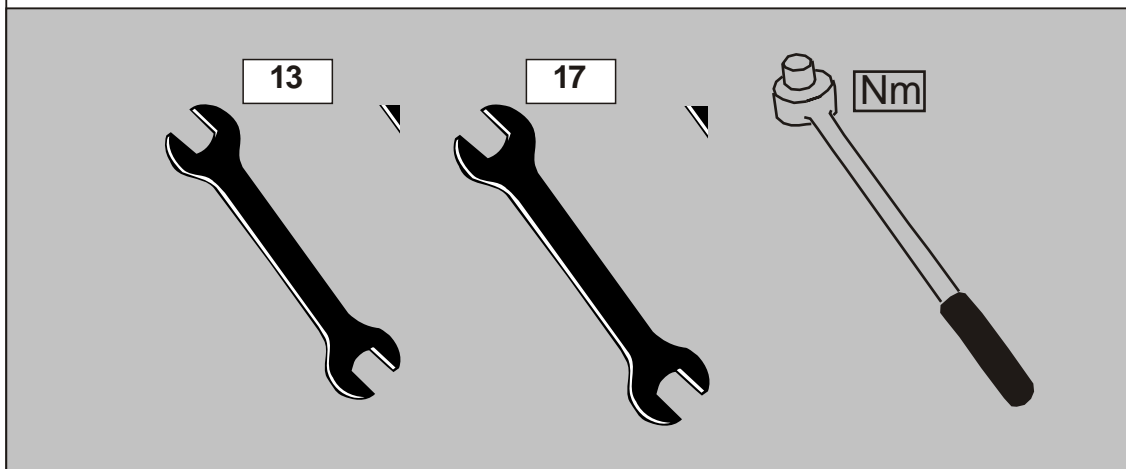

All rights reserved to modify the text

Type Nr.: 2E0 071 690 C 4P7
 2E0 071 694 C 4P7
 2E0 071 693 C 4P7

Required tools / Benötigte Werkzeuge / Benodigde werktuigen / Outillage requis
 Herramientas necesarias / Utensile necessarie / Verkttyg somsomkrävs



Parts list / Teileliste / Onderdelenlijst / Liste de pièces
 Lista de accesorios / Lista di pezzi / Artikel lista

A	 2 x	5	 $\varnothing 10,2$	4 x
2	 2 x	6	 M 8 x 50	4 x
3	 M 10 4 x	7	 M 8	4 x
4	 M 10 x 30 4 x	8	 $\varnothing 8,1$	4 x

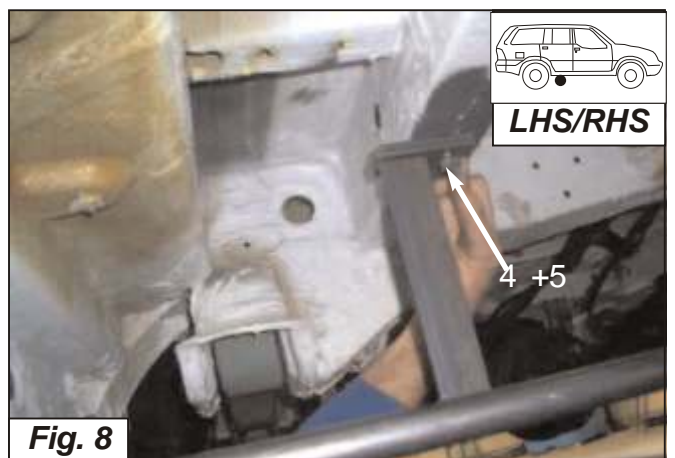
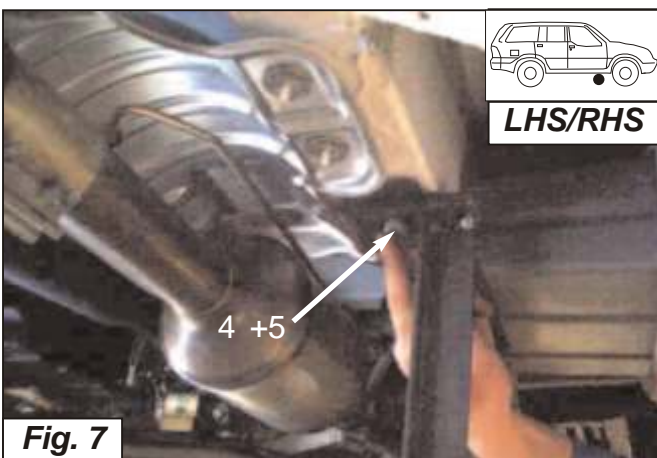
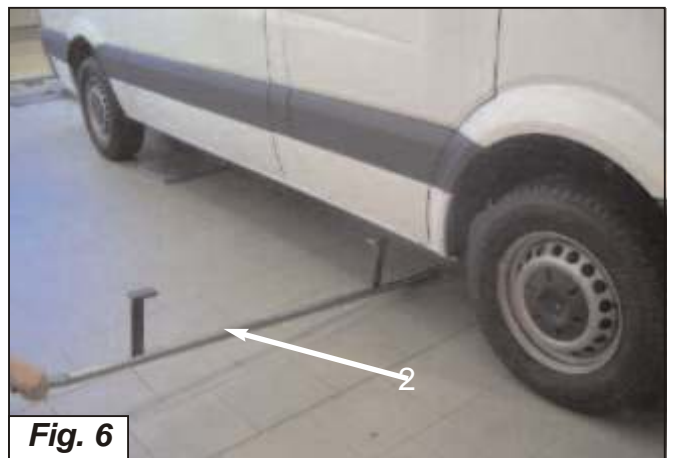
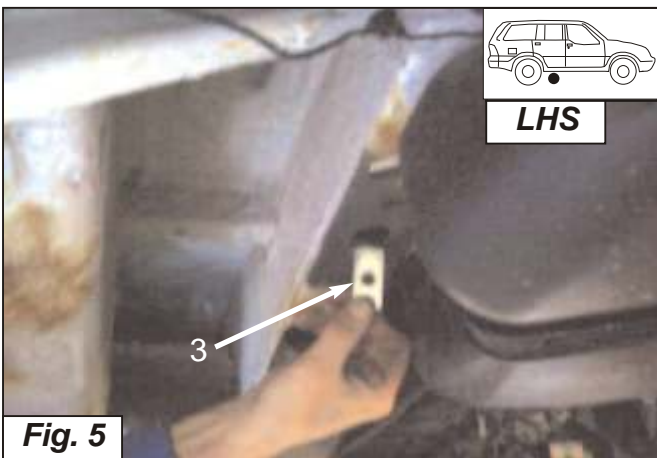
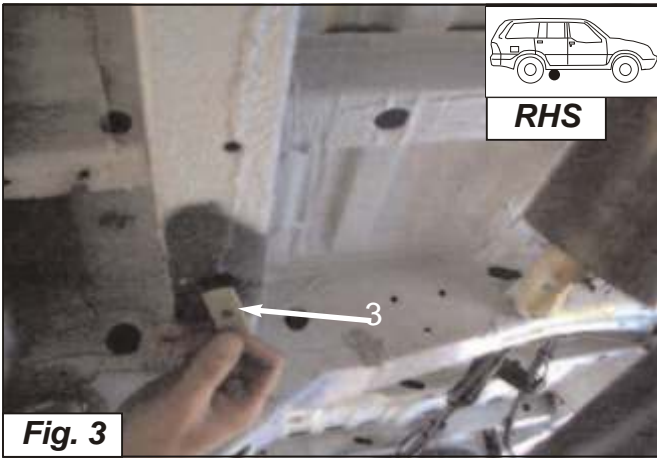
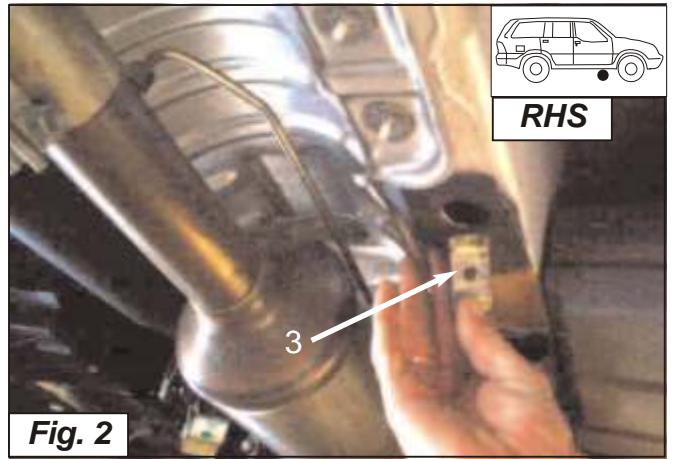




Fig. 9

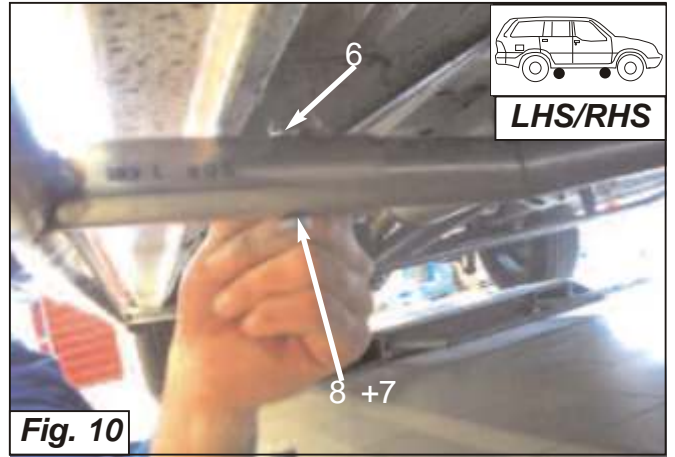


Fig. 10

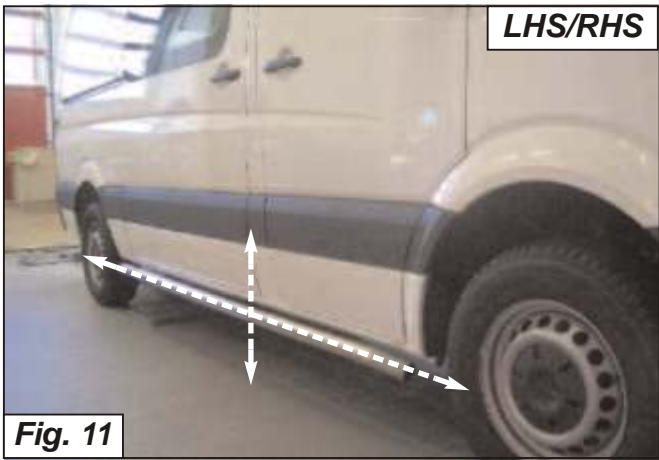


Fig. 11

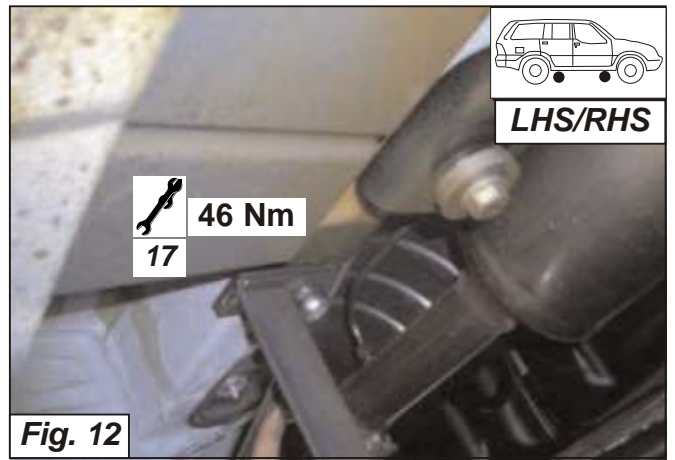


Fig. 12

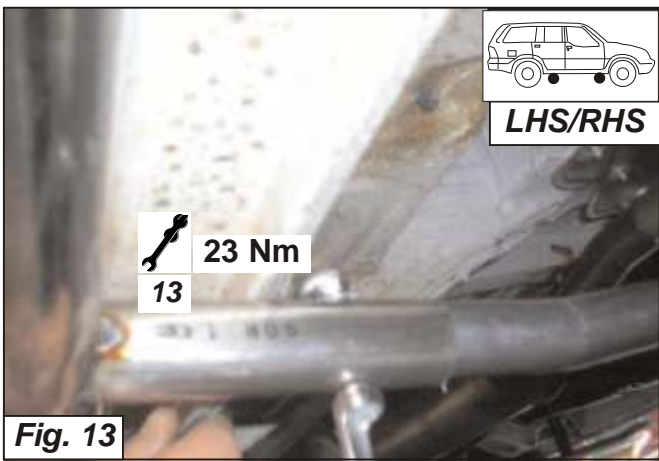


Fig. 13

